Fitting the Bay Corner

- Adjust the bay corner into the desired angle by loosening the segment screws. Once in the desired position re-secure the screws. (fig.15)
- 2. Slide the poles onto the plastic bung ends of the bay corners. (fig.16)

Bay corners should always be supported by two pass over brackets.



