


SWISH WOOD POLE


Fitting Instructions

Please keep for future reference

Tools required

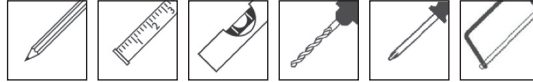

Please read these instructions carefully and check the contents of the pack before attempting to assemble and fix this product.

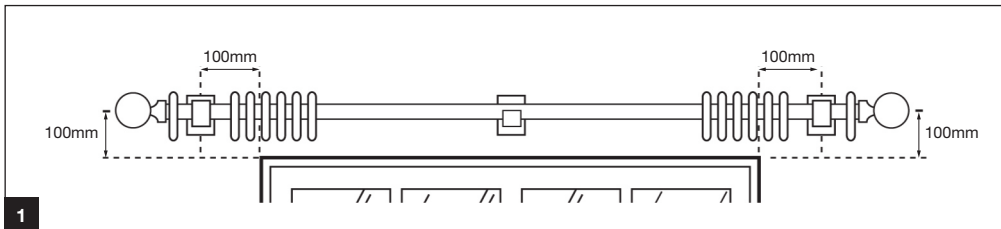

Wooden curtain pole

2 x finials

2 x end brackets

Rings: 1 per 10cm of pole

If pole is supplied in 2 parts, a centre bracket and joining screw are supplied
Fixtures and fittings

Should any component be missing, please call the Customer Care Department on
0330 005 2233.

Safety Recommendation

Only use a Step Ladder to install this product.

DO NOT over reach. Always move the Step Ladder so that you are in a safe working position.

DO NOT hold or lean on the pole to support your weight.

We recommend you use two people for installation of larger poles.

Take care when using power tools, use of a Residual Current Device (RCD) is recommended.

Always use eye protection when drilling. Beware of hidden pipe runs and cables.

No liability will be accepted for damage or injury caused by incorrectly installed or assembled product.

PLEASE KEEP OUT OF THE REACH OF YOUNG CHILDREN. SMALL PARTS - CHOKING HAZARD
PLEASE KEEP THESE INSTRUCTIONS AND THE BATCH CODE ON THE PACKAGING FOR FUTURE
REFERENCE IN CASE OF ANY QUERIES

Preparing and installing the pole:

1. Lay the pole and components out on the floor.
2. To position the brackets mark the wall to suit your desired location of the pole approx, 100mm (4") either side of the window and 100mm (4") above the top of the window. Where a centre support bracket is supplied it should be fitted central to the window and should support the pole joint. The dimensions above are a guide. Ensure bracket positions are level. (Fig 1)
3. Drill the wall in the marked positions using a suitable masonry drill bit ensuring that suitable wall plugs and screws for your type of wall are used. If in doubt consult your local DIY store or a qualified builder (Fig 2). Fix the bracket plate to the wall. *If a foam pad A is provided place it on the bracket plate. Place the bracket back cover on the bracket plate (Do not remove the plastic cushion Part C). Then screw the bracket arm onto the bracket plate as much as possible but ensuring that the bracket cup is pointing upward to receive the pole.
4. If necessary, trim the pole to size allowing for finials to be fitted at each end. **IMPORTANT:** if the pole is in two pieces join together using the double ended screw provided, cut equal amounts off each end to ensure that the join is in the centre and will be hidden by the centre support bracket.
5. If you have cut the pole you need to drill pilot holes to a depth of at least 30mm using a 3mm wood drill (Fig 3). This will allow you to fix the finials in place. Please use figure 4 as a template to mark the centre of the pole.
6. Slide the rings onto the pole (keeping two rings aside) and place the pole onto the brackets. Where a centre bracket is supplied make sure an equal amount of rings are on each side of the centre bracket.
7. Place one of the two remaining rings onto each end of the pole to keep the end of the curtain in place between the finial and the bracket. Secure the finials tightly to each end of the pole.
8. When satisfied with the position of the pole, lock it by tightening the pole retaining screw B (Fig 2) on the bracket.

Your pole is now ready to hang your curtains.

