



1

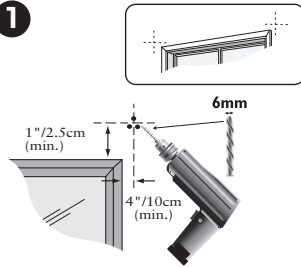


For plaster walls and heavy curtains a wooden batten should be used


2

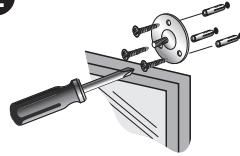


3

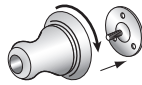

4

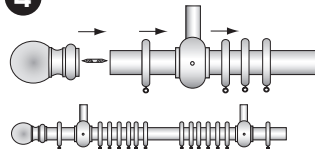


5

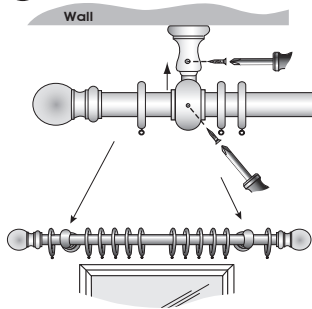

### Cutting the pole

A

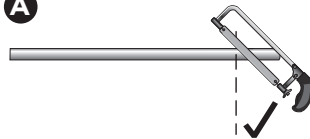

B

