



**ROUND38 STRAIGHT TRACK**

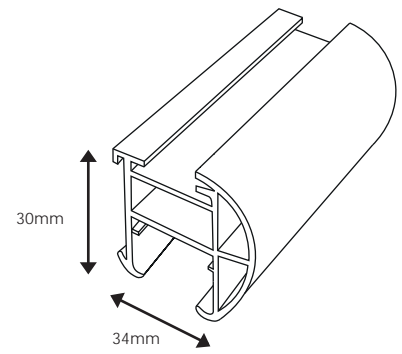

**1**

Join together factory cut ends and trim off the excess at the track ends only

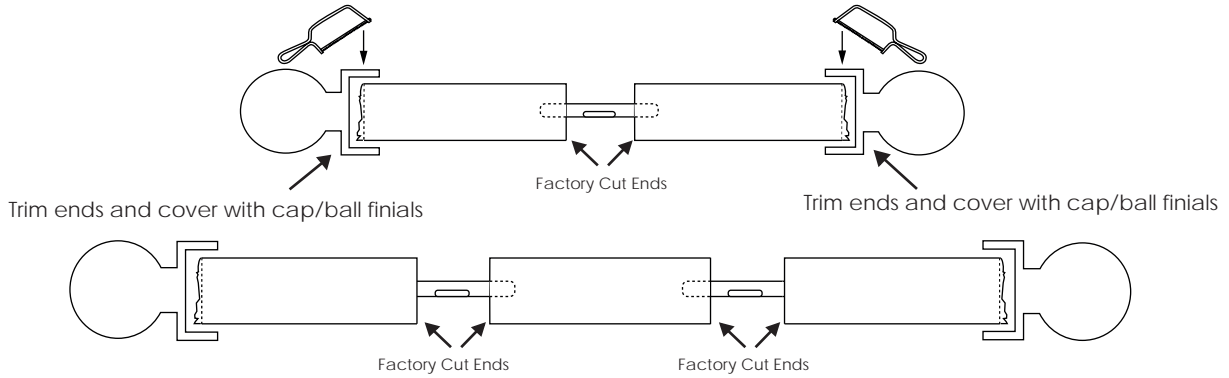


**2**


Place a support bracket as close as possible to the join

**3**

Ensure the joins are butted together tightly before tightening lock screws

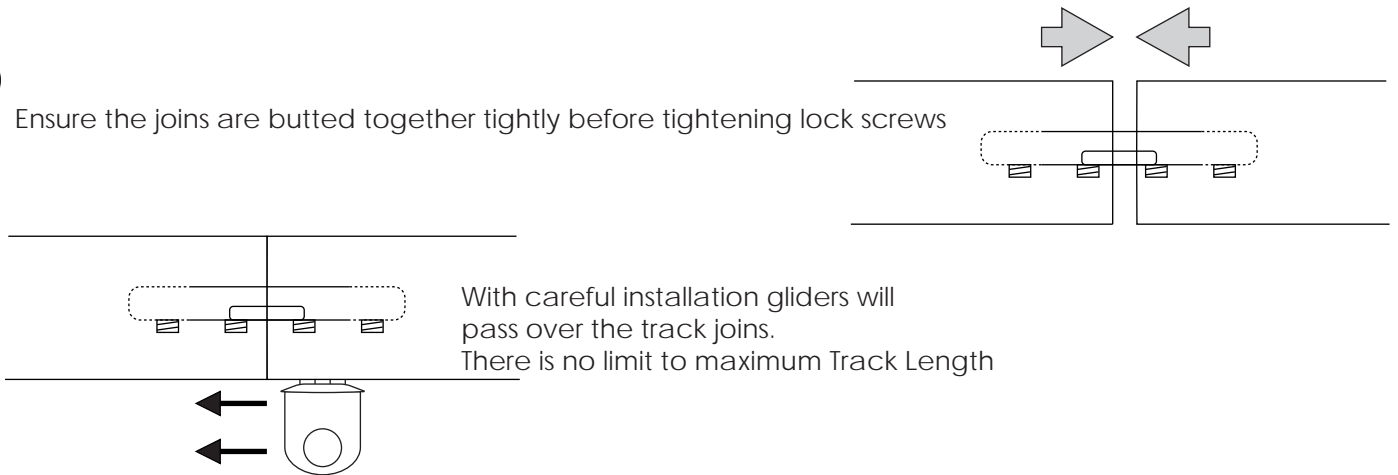

**TRACK JOINER**

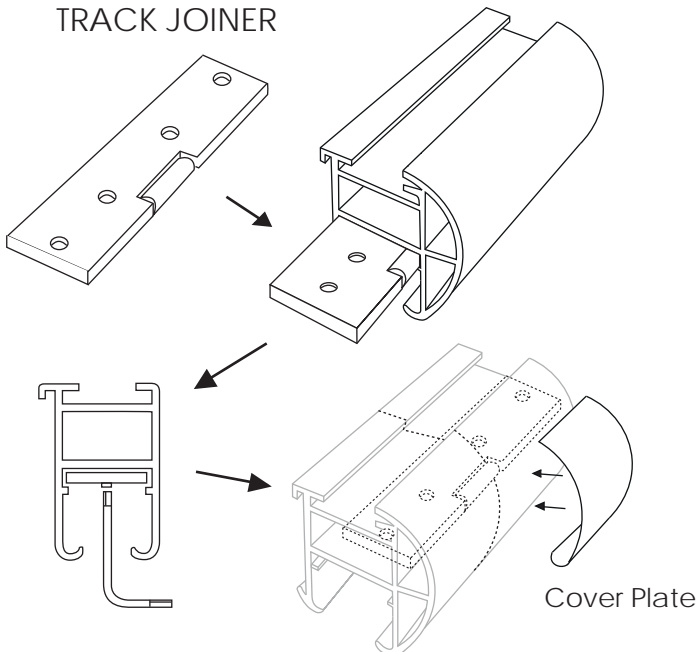


**BRACKET SPACING**




# BRACKETS AND FITTINGS

## Face Fixing

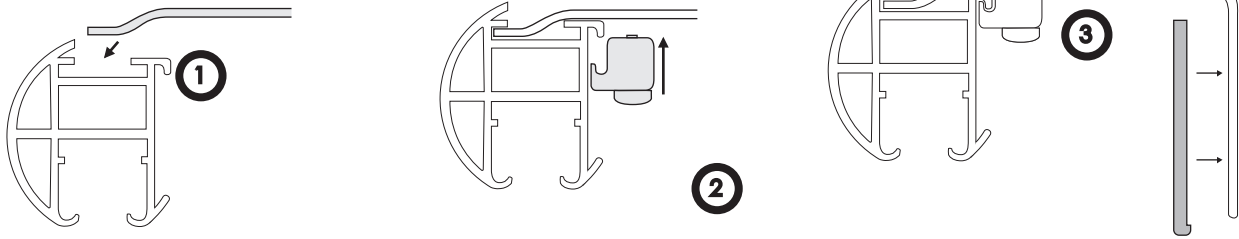

## Top Fixing

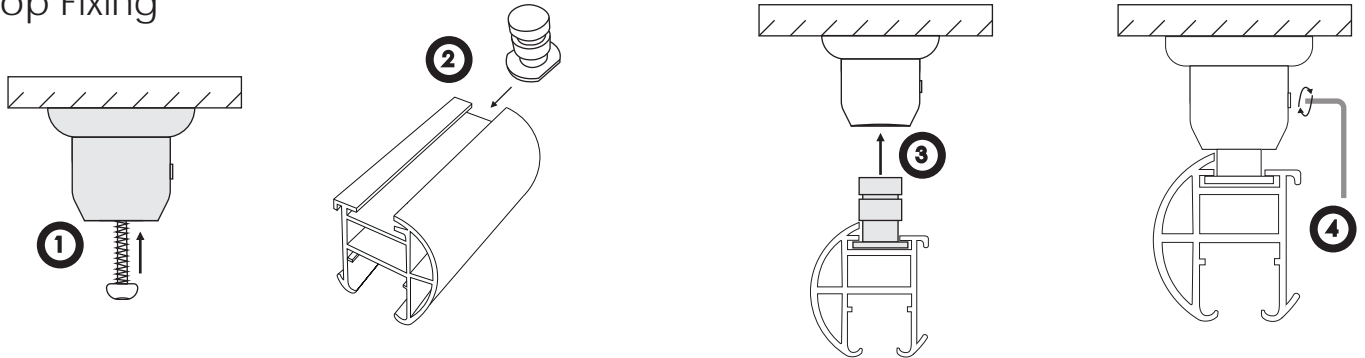

## Recess Fixing

